

 WETEK.play 2  
user manual



# TABLE OF CONTENTS

- 1. Introduction
  - 1.1 Important safety information
  - 1.2. Precautions
- 2. Product Overview
- 3. Get Started
  - 3.1. Gift-box Contents
  - 3.2. Installation Requirements
  - 3.3. Connections
  - 3.4. Power Adaptor
  - 3.5. RCU
    - 3.5.1 How to use
- 4. Specifications
- 5. Connecting
- 6. Further assistance
- 7. Warranty



# INTRODUCTION

Before using your WeTek Play2, please read carefully all the useful information provided in this manual. It will help you and will alert you to the necessary safety precautions preceding its first usage.

## 1. IMPORTANT INFORMATION FOR THE USERS

### 1.1 Important safety information

Read, follow and keep these instructions.

- Do not use this device near water.
- Clean only with a dry cloth.
- Do not block any of the ventilation openings.
- Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at the plug, receptacles and the point where they exit from the device. .
- Only use accessories included within this package or recommended by the manufacturer.
- Unplug this device during lightning storms or when unused for long periods of time.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this device to rain or moisture.



This symbol indicates “dangerous voltage” inside the product which presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

### 1.2. Precautions

Please read these precautions before operating this unit.

#### a) Power cord protection

To avoid any malfunctions of the unit, please observe the following:

- Hold the plug firmly when connecting or disconnecting the power cord.
- Keep the power cord away from heating appliances.
- Never put any heavy object on the power cord.
- Do not attempt to repair the power cord in any way.
- Never make or change connections with the power switched on.

#### b) Location

Avoid placing the unit in areas of:

- Direct sunlight or heating radiators.
- High temperature (over 50°C) or high humidity (over 90%).
- Dust, as the internal parts may be seriously damaged.

#### c) Non-use periods

When the unit is not being used, turn it off. If it is unused for a long period of time, the unit should be unplugged from the power source.

## 2. PRODUCT OVERVIEW

### d) No fingers or other objects inside

- Touching internal parts of this unit is dangerous and may cause serious damage to the unit.
- Do not attempt to disassemble the unit. Do not put any foreign object in this unit.

### e) Keep away from water

Keep the unit away from flower vases, tubs, sinks, etc. If liquids are spilled into the unit, serious damage could occur.

WeTek Play 2 brings endless entertainment to your living room. Enjoy the latest movies and series in 4K UHD, play games, browse the internet, keep up with the news or use the DVB modular tuner to watch thousands of TV channels via satellite, terrestrial or cable connections.

Your WeTek device gives you access, among others, to the following possibilities:

- Modular DVB tuner for satellite, cable or terrestrial connections.
- HDMI interface for digital audio and high-definition video
- Composite interface (RCA, yellow / white / red) for analog AV connection
- S / PDIF (optical) digital audio hi-fi
- Video output resolutions up to 4K
- Surround Digital audio output multi channel or stereo (digital surround sound is only available when using the S / PDIF interface)
- Wired (Ethernet cable not included) or wireless Internet connection.
- Use microSD cards.
- 3 USB external ports where you can connect several USB storage devices and access them simultaneously. You can also connect keyboards, webcams and other devices with USB connection.
- Bluetooth to connect your speakers, keyboard, mouse, fitness watches, mobile phone and other devices with Bluetooth 4.0.



# 3. GET STARTED

## 3.1. Gift-box Contents



Before you install your WeTek Play 2, check that all the accessories you need have been supplied.

- 1 WeTek Play 2 device
- 2 RCU
- 3 Power adapter
- 4 HDMI and RS232 cables
- 5 Update Nail

## 3.2. Installation Requirements

Your WeTek Play 2 can be installed correctly when accompanied by:

- TV, monitor or projector with HDMI port or alternatively with composite input ports (standard A/V).

- Two AAA batteries for the RCU
- Internet network connection (required for updates and streaming)
- Ethernet cable (optional)
- Optical cable (S / PDIF) (optional)
- AV Composite Cable (alternative to HDMI connection)\* (optional)
- Coaxial cable (optional)
- MicroSD card for external storage (optional)

\*Please note that not all AV cable may be compatible with WeTek. To get the best performance you should use an official cable. The cable is not included with Wetek models, but can be purchased at the WeTek online shop.

## 3.3. Connections

### Back view



- 1 Modular DVB Tuner (optional)
- 2 2x USB
- 3 AV output
- 4 Ethernet port
- 5 HMDI output
- 6 Optical output
- 7 RS-232
- 8 DC in

## Side view



- 1 USB port
- 2 Micro SD port

## Front view



- 1 Power Button / Status LED  
*Turn on and off your WeTek directly by pressing this button. Alternatively you can do it with the Remote Control Unit.*  
*Off - The power cord is disconnected.*  
*Red - WeTek is in off*  
*Blue - WeTek is on and the boot image should appears on the screen*
- 2 Ethernet Status LED
- 3 WiFi Status LED

## Bottom view


### Upgrade button

WeTek Play 2 allows to access the upgrade button if an hard factory reset is required.



### 3.4. Power Adapter

WeTek Play 2 is available with a set of interchangeable plugs to accommodate standard wall sockets in multiple countries. Before using the AC adapter, you need to install the correct plug according to your country socket. To install and remove see the illustration below.

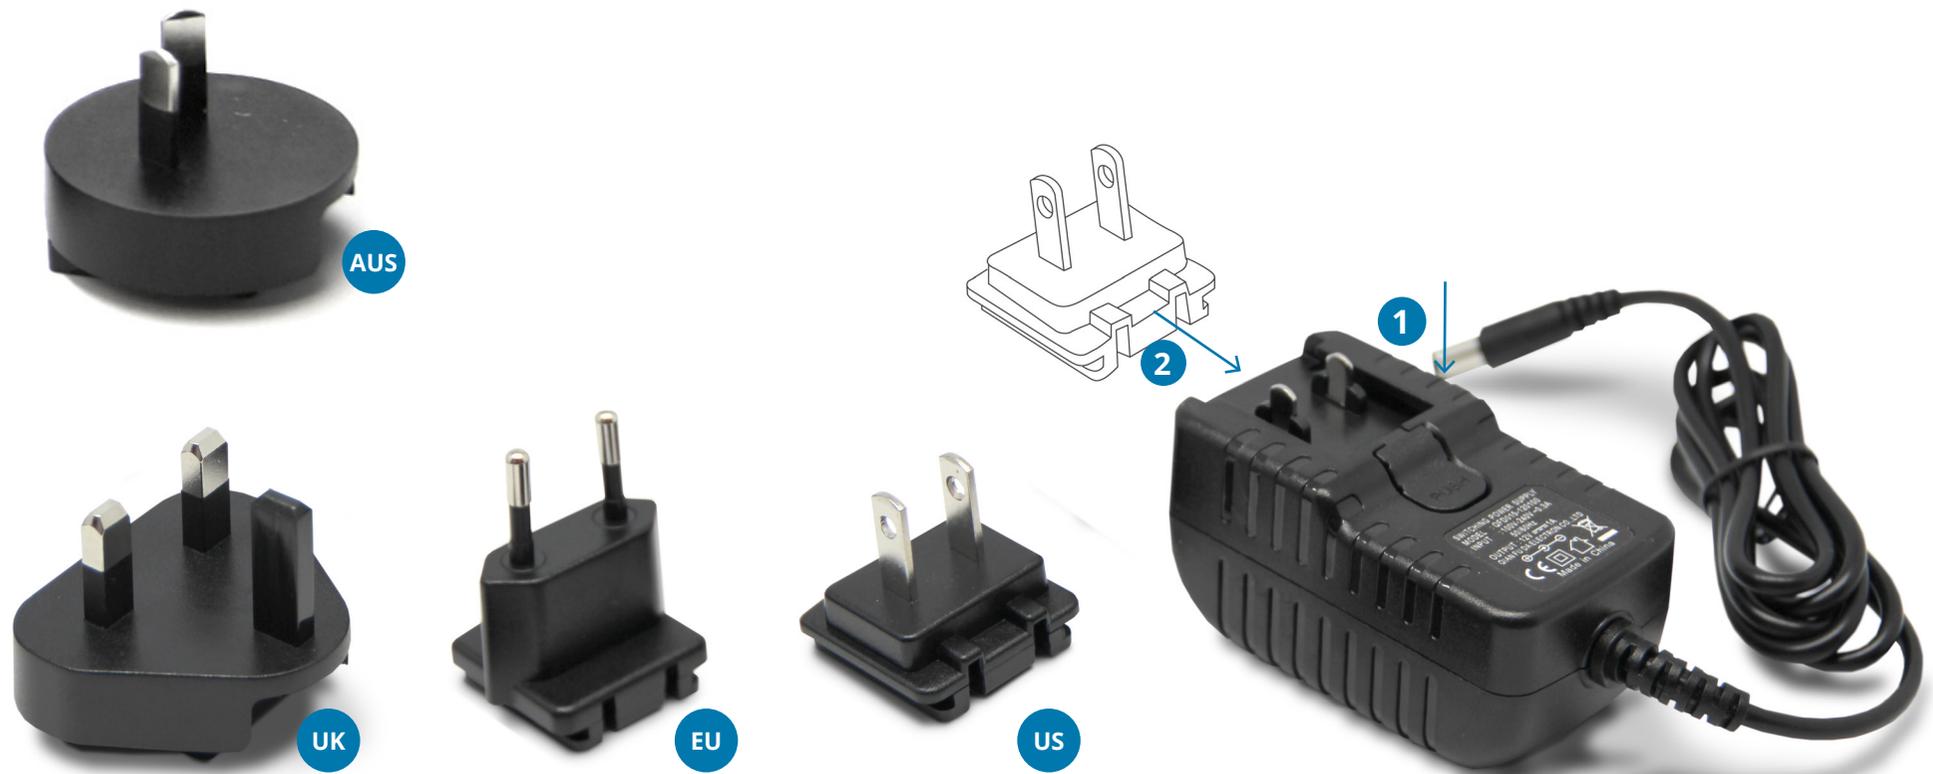



## 3.5. RCU

### GENERAL FUNCTIONS

- 1 Power button
- 2 TV app
- 3 Mute
- 4 Alphanumeric pad
- 5 Backspace
- 6 Shift
- 7 Home
- 8 Menu
- 9 Back
- 10 Recent Apps
- 11 On/Off Directional Mouse
- 12 Apps
- 13 Directional keys
- 14 OK button
- 15 Volume up/down
- 16 Channel up/down
- 17 Add to Favorites
- 18 Teletext
- 19 WeTV special controls
- 20 Playback controls

### 3.5.1 How to use

The WeTek Play 2 remote control unit allows you to browse all the operating system's features.

To control the mouse cursor with the directional keys, press key 11. To disable this function, press the key 11 again.

Press the button 7 Home whenever you wish to return to WeTek main page,

The alphanumeric keypad allows you to enter in the search fields letters or numbers. Alternatively you can use the virtual keyboard.

**CAUTION:** Do not expose the batteries or the remote control with batteries in places too hot (direct sunlight, fire, etc.).

**NOTE:** Key functions may vary according to operating system and running program.

## 4. SPECIFICATIONS

### GENERAL

Device Name	WeTek Play 2
Processor (CPU)	AMLogic S905-H Rev C Quad Core
GPU	Octa-core ARM Mali-450MP
RAM Memory	2 GB DDR III
ROM Memory	8 GB eMMC
Modular Tuner* (*optional)	DVB-S2, DVB-C/T/T2 and ATSC

### SOFTWARE

Operating System	Android 5.1.1
------------------	---------------

### CONNECTIONS

Ethernet	1000 Mbit/s(Gigabit Ethernet)
Wireless LAN	802.11 2.4/5 GHz B/G/N
Bluetooth 4.0	yes
USB 2.0	3
Memory Card Reader	1 (micro SD)
IR	yes
Serial Debug	RS-232

### AUDIO & VIDEO

SPDIF	1
A/V Output	1 (compatible with 17mm TRRS jack only)
HDMI	1x 2.0

### OTHERS

Power Supply Unit	DC In Interchangeable plugs (EU, UK, USA, AUS)
LED	Power, Standby, Ethernet, WiFi
Remote Control Unit	<b>IR Remote Control</b>
Housing dimensions	42x125x180mm



# 5. CONNECTING

Before connecting your WeTek device to your TV/monitor or projector, please ensure that it is placed on a flat and stable surface.  
Now that your WeTek Play 2 is in position, please refer to the following diagram.

- 1 Connect WeTek Play to a TV using the HDMI digital output (1a) or the AV output (1b) as an analog alternative.
- 2 Connect the Ethernet cable to the router or use a wireless access.
- 3 If you have an external sound system, connect the optical output.
- 4 Connect the antenna cable.\*
- 5 Connect the power supply to your WeTek.
- 6 Connect the remote inserting two AAA batteries (not included).
- 7 Connect the device using the power button, wait for the boot animation and follow the Wizard to configure your WeTek Play 2.

*\*the modular tuner is an optional feature*



## 6. FURTHER ASSISTANCE

This manual does not end here. To help you improve your user experience, you can access additional information, tutorials, quick guides assistance, screens, forums and more, visiting [wetek.com/support](http://wetek.com/support).

If you find any problem, please give us the opportunity to address it before returning this product. Most technical support questions can be answered through our knowledge base or the online support service.

*Note: Some support operations may require that you have access to a PC with Windows 7 or higher, an available serial port (or a serial-USB converter), as well as a Telnet / SSH client software such as Putty.*

## 7. WARRANTY

To find all Warranty & Return Terms regarding WeTek Play 2, please access [wetek.com/terms](http://wetek.com/terms).

NOTE: The warranty will be voided if installed any non-official ROM or recovery. To proceed with any refund process, your WeTek Play 2 needs to have the original software installed.



